


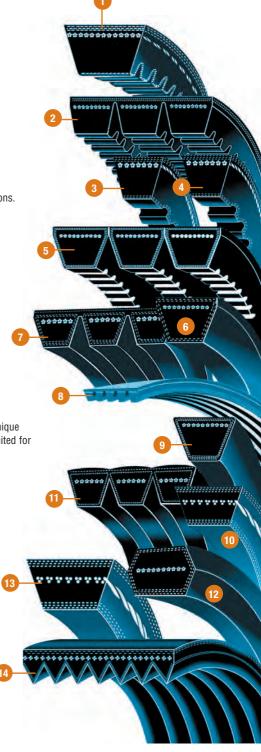

- 1 *Gold Ribbon® Cog-Belt® (AX,BX,CX,DX) The Energy Saver! More efficient than ordinary belts. The finest classical V-belt available.
- 2 Gold Ribbon® Cog-Band® (RBX,RCX,RDX) A unique combination of our energy saving Cog-Belt and the banded concept.
- 3 *Power-Wedge® Cog-Belt® (3VX,5VX,8VX) Space saving V-Belt transmits higher HP and provides longer life for maximum savings.
- 4 *Metric Power-Wedge® Cog-Belt®
 (SPZX, SPAX, SPBX, SPCX) Compact and efficient operation for drives that require metric cross sections. Reduces weight and overhung load.
- 5 Power-Wedge® Cog-Band® (R3VX, R5VX) Power Wedge Cog-Belt in banded design. Compact and efficient. Eliminates whip and turnover on narrow drives.
- 6 *Super Power-Wedge® V-Belt (5V,8V) Designed for lower cost, more compact multiple-belt drives.
- 7 Wedge-Band® (R3V, R5V, R8V) Carlisle's Power-Wedge belt in banded design. Eliminates whip and turnover on narrow drives.
- 8 Wedge-Band® Chipper Drive Belt (R5VL)
 Specially designed and constructed to meet the unique demands of the forest products industry. Ideally suited for chipper saws, debarker drives, head rigs and hogs.
- 9 * Super Blue Ribbon® V-Belt (AP,BP,CP,DP)
 The finest wrapped belt in the industry.
- 10 *Super II® V- Belt (A,B,C)
 The revolutionary raw-edge® belt from Carlisle that blows the cover off conventional wrapped belts with its unique construction.
- 11 Super Vee-Band ® (RBP,RCP,RDP) Carlisle's Super Blue Ribbon V-Belt in banded design. Eliminates belt whip and turnover on conventional drives.
- 12 Double-Angle Belt (AA,BB,CC)
 Designed for use on serpentine type drive applications.
- 13 Durapower® II (Raw Edge) FHP Light Duty V-Belt Longer belt life and improved performance.
- 14 Vee-Rib Belt (J) Increased horsepower in two thirds the space required for normal belts.



* available in **chek mate** construction

Table of Contents

The **Carlisle V-belt Drive Service Manual** has been prepared with the double purpose of: helping you AVOID V-belt drive problems by presenting a step-by-step replacement procedure and helping you SOLVE V-belt drive problems by offering troubleshooting techniques.


Subject Pag	je
V-Belt Construction	.2
V-Belt Drive Advantages	.3
Section 1– Preventive Maintenance and Installation of V-Belt Drives	-9
V-Belt Installation Check List	.9
Section 2 – Corrective Maintenance and Troubleshooting of V-Belt Drives	35
V-Belt Drive Troubleshooting Guide12-1	3
Troubleshooting Installation Problems	21
Troubleshooting Selection Problems	27
Troubleshooting Environmental Problems	31
Troubleshooting Design Problems	35
Installation and Take-Up Data	36
V-Belt Tensioning	38
V-Belt Deflection Force Values	39
Topical Index	10

⚠ WARNING - SAFETY NOTE


Failure to follow recommended application information and recommended procedures for installation, care, maintenance and storage of products may result in failure to perform properly and may result in damage to property and serious bodily injury. Make sure that product selected for any application is recommended for that service. Contact Carlisle or your Carlisle distributor for assistance or specific recommendations.

Guidelines presented in this manual are suggestions to help install and maintain belts properly. Always follow the recommendations of the original equipment manufacturer.

Wrapped Belt

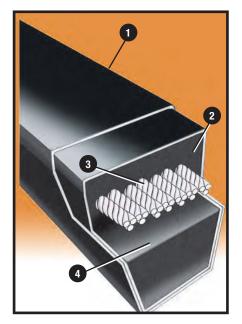

Raw Edge® Cog-Belt®

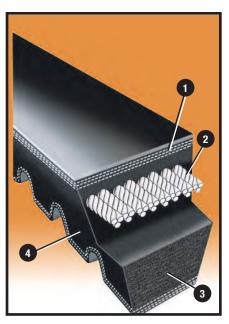

Before we talk about "Avoiding Problems" and "Solving Problems", let's take a brief look at how V-belts are constructed.

There are basically two types of construction. One has a fabric cover surrounding it; the other—usually rated higher in horsepower—is made in a raw edge, cogged construction.

Wrapped Belt

- **1. Cover**—Woven cotton fabric impregnated with neoprene.
- Tension Section—Synthetic rubber specially compounded to stretch as belt bends around sheaves.
- Cords—High-strength, synthetic fiber cords carry the horsepower load and minimize stretching.
- Compression Section—Synthetic rubber compounded to support cords evenly and compress while bending around sheaves.

Raw Edge® Cog-Belt®

- Tension Section—Specially woven stress-relieved fabric stretches up to 176% more than ordinary bias-cut fabric.
- Cords—Synthetic Hi-Modulus cords form the strength member to carry high loads with minimum stretching.
- Compression Section

 Exclusive
 Stiflex® rubber compounds and
 precision molded cogs increase
 flexibility while supporting cords
 evenly.
- Raw Edge® Sidewalls—Provide uniform, anti-slip surface, greater flexibility and allows more cord width.

V-Belt Drive Advantages



V-belt drives provide many maintenance advantages that help in your daily struggle to reduce equipment repairs and to hold downtime to a minimum.

- 1. They are rugged—they will give years of trouble-free performance when given minimal attention...even under adverse conditions.
- 2. They are clean—require no lubrication.
- 3. They are efficient–performing with an average of 93-95% efficiency. Raw-edge cog belts are 95-97% efficient.
- 4. They are smooth starting and running.
- 5. They cover extremely wide horsepower ranges.
- 6. They permit a wide range of driven speeds, using standard electric motors.
- 7. They dampen vibration between driving and driven machines.
- 8. They are quiet.
- 9. They act as a "safety fuse" in the powertrain.
- 10. V-belts and sheaves wear gradually—making preventive and corrective maintenance simple and easy.

You will notice **Reference Key Numbers** (such as <u>1</u>) appear throughout this section. These refer to a more detailed discussion with illustrations relating to the subject in Section 2 (Corrective Maintenance and Troubleshooting).

Safety First

Before doing any maintenance work on power drives, be sure the controlling switch is in the OFF position, locked out and tagged. Follow your plant's safety rules.



Preventive Maintenance and Installation of V-Belt Drives



Relieve Belt Tension

△ -1

After removing the drive guard, loosen the drive take-up and move the sheaves closer together to facilitate the removal of all old belts, and to insure installation of the new belts without damage.



Inspect Drive Elements

<u>A</u> -1 <u>A</u> -6

This is a good time to service the take-up rails by removing any rust and dirt, and lubricating as necessary so tensioning of the new belts will go smoothly and easily. You now also have an excellent opportunity to inspect and replace faulty or damaged machine elements such as worn bearings and bent shafts.

This procedure not only reduces the likelihood of future mechanical trouble, but insures maximum service from the new belts you are about to install.

Sheaves should be carefully cleaned of any rust and foreign material. A wire brush followed up with a shop cloth will usually do the job. Cleaning sheaves will reduce sheave wear.



Inspect Sheaves



Sheave condition and alignment are vital to V-belt life and performance. New V-belts should never be installed without a careful and thorough inspection of the sheaves involved.

Particular attention should be given to these conditions:

- a. Worn Groove Sidewalls
- b. Shiny Sheave Groove Bottom
- c. Wobbling Sheaves
- d. Damaged Sheaves



Shiny Sheave Groove Bottom



Worn Groove Sidewalls



Wobbling Sheaves




Damaged Sheaves

Align Sheaves (Preliminary)

A-3 A-5

Alignment should be given preliminary consideration at this time. Use a laser alignment tool or straight edge to check that:

- a. The shaft of the DriveR and the DriveN sheaves are parallel, horizontally and vertically.
- b. The DriveR and DriveN sheaves are in a straight line.
- c. Both sheaves are properly mounted and as near to the bearings as practical.

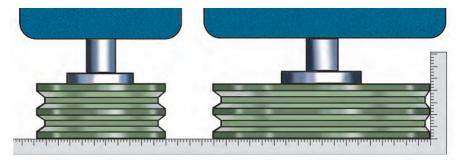

Preventive Maintenance and Installation of V-Belt Drives



Select Replacement Belts

After you have made any necessary corrections in your V-belt drive elements, the next step is the selection of the right replacement belts.

In replacing sets of V-belts, here are some Very Important Reminders:

- NEVER MIX NEW AND USED BELTS ON A DRIVE
- NEVER MIX BELTS FROM MORE THAN ONE MANUFACTURER
- ALWAYS REPLACE WITH THE RIGHT TYPE OF V-BELT
- ALWAYS OBSERVE V-BELT MATCHING LIMITS

Installing New Belts

A -1

Place the new belts on the sheaves, and be sure that the slack of each belt is on the same side. You can do this by pressing the belts with your hand to bring the slack on one side of the drive. Loosening the drive take-up in advance makes this easy.



Right

Do not force the belts onto the sheaves by using a pry bar or by rolling the belts onto the sheaves.

Now, move sheaves apart until the belts are seated in the grooves, and make preliminary tightening of the drive, just until the slack is taken up.



Wrong



Apply Tension

<u>A</u>-7 <u>A</u>-8

All V-belt drives must operate under proper tension to produce the wedging action of the belt against the groove sidewall. A well-established rule of thumb is that the best tension for a V-belt drive is the LEAST tension at which the drive will not slip under peak load.

Most V-belt problems are due to improper tensioning. Several tools and methods are available to insure proper tensioning.

A simple and easy option is the Tension-Finder® available only from Carlisle.

Run the drive for about 15 minutes. Then apply full load and check for slipping. Should slipping occur, further tension should be applied.



Carlisle Tension-Finder

After the drive has operated under load long enough for the belts to become seated and adjusted (approximately 24 hours), it is a good idea to make a final tension inspection.

For a complete discussion on tensioning and slippage, refer to Section 2 $ilde{ \triangle}$ -7, in this manual.


Check Sheave Alignment (Final)

<u>A</u> -3

One of the advantages of V-belt drives is the fact that perfect alignment of sheaves is not critical to the operation of the drive. V-belts tolerate misalignment of up to 1/16 inch per 12 inches of shaft center distance. However, the closer you can come to perfect alignment, the better.

Laser Alignment

Use a laser alignment tool or straight edge to check alignment. The straight edge should make contact at four distinct points along the outside perimeter of both sheaves.

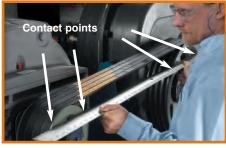

Make Contact at Four Points



Carlisle Laser-Align is Fast and Accurate

Refer to Section 2, 📤 -3, for complete discussion of proper alignment procedures.

Note: Sheaves should always be mounted as close to the bearings as practical to avoid excessive loads on bearings and shafts.

You have now completed a practical procedure for replacing V-belts that should help you AVOID problems with your V-belt drives. The check list on page 9 serves to summarize the points discussed in this section.



V-Belt Installation Check List

1.	Cut off and lock out power source.
2.	Observe all other safety procedures.
3.	Follow the recommendations of the original equipment manufacturer.
4.	Remove belt guard.
5.	Loosen motor mounts.
6.	Shorten center distance.
7.	Remove old belts.
8.	Inspect belt wear patterns for possible troubleshooting.
9.	Inspect drive elements-bearings, shaft, etc.
10.	Inspect sheaves for wear and clean.
11.	Check sheave alignment. (preliminary)
12.	Select proper replacement belts.
13.	Install new belts.
14.	Tension belts.
15.	Check sheave alignment. (final)
16.	Replace guard.
17.	Start drive (look & listen).
18.	Re-tension after 24 hours.



Corrective Maintenance and Troubleshooting of V-Belt Drives

The first section of this V-Belt Service Manual outlined a step-by-step procedure for the installation of replacement V-belts to help you prevent V-belt maintenance problems.

The reason behind these steps is also fundamental in the daily inspection and maintenance of V-belt drives. Watching and listening will alert you to warning signs of trouble, since one of the greatest advantages of V-belt drives is the fact that belts and sheaves wear gradually. You can spot potential problems in time to arrange a short, scheduled maintenance down-time instead of experiencing a longer, costly interruption of production when unexpected trouble occurs.

V-belts may be thought of as being much like electrical fuses—their unexpected failure is usually a signal that something else in the system is wrong. The pattern of wear can often indicate conditions needing correction or improvement.



Corrective Maintenance and Troubleshooting of V-Belt Drives



How to correct maintenance problems by using Carlisle's Quick Reference Troubleshooting Guide

The **V-Belt Drive Troubleshooting Guide** presented on the following pages represents knowledge acquired by Carlisle in the development and manufacture of V-belts for almost 100 years.

This quick-reference guide lists the most common **symptoms** or warning signs of drive problems and then indicates possible causes.

Each possible cause is further referenced by a **key number** (such as 🚣 -1) which indicates where you may find the **cure** in a more detailed discussion of the subject in this section of the manual.

These discussions are grouped into four major sections:



Troubleshooting INSTALLATION Problems



Troubleshooting SELECTION Problems



Troubleshooting ENVIRONMENTAL Problems



Troubleshooting DRIVE DESIGN Problems

Practical, non-technical **troubleshooting tips** are included to help quickly identify and correct suspected problems.

CURES	A-1	A-2	A-3	A-4	A-5
CAUSES SYMPTOMS	Belts Pried On Or Misplaced Slack	Belts Rubbing Guard	Sheaves Misaligned	Worn Or Damaged Sheaves	Sheaves Too Far From Bearing
Rapid Sidewall Wear		•	•	*	
Worn Cover On Back	*	•			
Belt Turns Over Or Jumps Off Sheave	•		•		
Belt Soft, Swollen					
Belt Slips, Squeals (Spin Burn)	•			*	
Belt Cover Split	*				
Underside Cracked				•	
Tie-Band Damaged		•	•	*	
Snub Break					
Belts Ride Too High					
Belts Bottoming				*	
Repeated Take-up Necessary	*			•	
Belts Vibrate Excessively Or Appear Mismatched	•		•	•	
Bearings Are Hot				•	•
Shafts Whip Or Bend				•	•
Cracked Bushings				•	
Sheave Wobble * Indicates most common causes • Indicates most cause most cause of the Indicates most cause of the Indica				•	causes



A-6	A-7	A-8	A-9	B-1	B-2	B-3	B-4	C-1	C-2	C-3	C-4	C-5	9-0	C-7	D-1	D-2	D-3	D-4	D-5	9-Q
Poor Bearing Or Shaft Condition	Insufficient Tension	Excessive Tension	Improper Sheave Installation	Belts Worn (Normal Service Life)	Wrong Belt Cross-Section Or Type	Mismatched Belts Or Mixed Brands	Machine-Induced Impulse Or Shock	Improper Or Prolonged Storage	Excessive Heat	Excessive Oil Or Grease	Use of Belt Dressing	Abrasive Environment	Foreign Objects In Grooves	Excessive Moisture	Overloaded Drive/Underbelting	Drive Seriously Overbelted	Sheaves Too Small	Insufficient Wrap On Small Sheave	Backside Idler	Harmonics
	•				•			•	•	•	•	•		•						
																			•	
	•				•		*						•							•
										*	•									
	*				•	•				•				•	•		•	•		
													•							
	•	•						•	*								*	•	*	
					•								*							
		•	•				•						•							
					*						•									
				•	•															
	•				•										*					
	•	•	•			•	*													•
•		*							•							•	•			
•		*														•	•			
			*						•											
•			*																	

Troubleshooting Installation Problems


As pointed out in Section 1 of this manual, preventive maintenance by using proper installation techniques is important for long, trouble-free V-belt service.

Occasionally, however, you will find it necessary to correct problems caused by improper installation. This section deals with these problems and troubleshooting procedures.

Troubleshooting Installation Problems



^ -1 Prying or forcing V-belts onto the sheaves can, and usually does, break some of the load-carrying tensile cords (see photo on page 7, Section 1). When this happens, the belt may either break or turn over in the groove, usually within the first few minutes of operation. This method of installation may be evidenced by a rupture or split in the wrapped cover of the belt, caused by the prying tool or sheave edge. Broken cords are

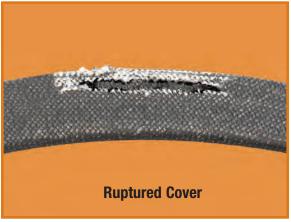


easily identifiable on raw-edge V-belts, because it is usually the edge cords that break first.

Misplaced Slack

can also cause belt breakage, again usually on startup. This occurs on multiple-belt drives when all of the belt slack is not brought to the same side of the drive before tensioning. If some belts are tight on one side, and others are tight on

the other side, the heavy shock load of starting will be borne by only some of the belts, thus weakening or breaking the load-carrying cords.

△-2 Belts rubbing against the metal guard or other obstruction will be evidenced by cut or worn fabric on the back or upper edge of the V-belt. Often just replacing missing bolts in guard brackets will remedy this situation.

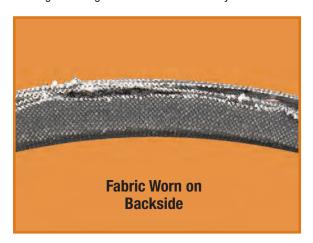




Section 2 A Troubleshooting Installation Problems

△ -3 **Misaligned sheaves** can cause rapid wear of the V-belt sidewalls, considerably shortening service life of both belts and sheaves. Misalignment can also cause separation of the tie-band on banded belts, or apparent mismatching of individual belts. V-belt sheave alignment should be within a tolerance of 1/16" per 12" of drive center distance.

The three basic types of sheave and shaft misalignment are shown below, with suggested methods for checking and correcting each type. Note that all 3 types may exist at the same time. Alignment should be checked and corrected in the order given.



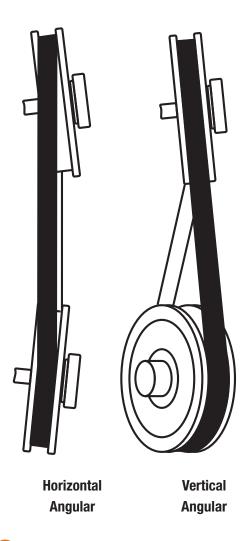




Troubleshooting Installation Problems




Horizontal Angular (shafts in same horizontal plane but not parallel)
 To Check: Use laser alignment tool or straightedge near sheave centers.
 To Correct: Loosen motor mounting bolts and rotate motor until all 4 points touch straightedge.



2. Vertical Angular (shafts in same vertical plane but not parallel)
To Check: To Check: Use laser alignment tool or place straightedge about 1 and 1/4 radius from the outside diameter of both sheaves. Repeat on opposite side of shaft 2. The straightedge should touch at all 4 points shown below.
To Correct: Use shims under motor base in front or rear of motor, depending on type of correction required.

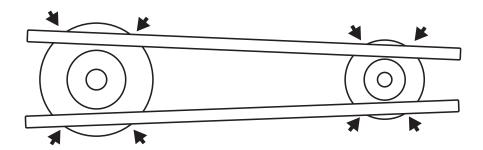

 3. Parallel (shafts are parallel; sheaves not in line)
To Check: Use laser alignment tool or straightedge near sheave centers.
To Correct: Loosen sheave so it slides easily on shaft until all 4 points touch straightedge. Retighten sheave in position. Important: Sheave should be mounted as close to bearing as possible to reduce overhung load on bearing. Re-locate equipment if necessary.




⚠ -4 **Worn or damaged sheaves** are an even greater cause of rapid belt wear, slippage and vibration. Badly worn sheaves can cause over-tensioning of the drive to prevent slippage, indirectly causing over-heated bearings and shaft damage. If pieces of the sheave flange are missing, it will result in badly worn sidewalls of the belt, and the resulting sheave imbalance can damage bearings and create a safety hazard. When only some of the grooves are worn more than others, the effect is that the belts appear to be mis-matched. It also causes "differential driving," where only some of the belts are carrying the entire load of the drive.

In the case of banded belts, worn grooves cause the belts to ride too low in the grooves, thus causing the tie-band to wear against the sheave flanges between the grooves. In severe cases, this can have the same effect as a circular blade, cutting the band and separating the belts.

Sheave templates are available from your Carlisle distributor, which can be used to check grooves accurately for wear. A flashlight held behind the template when placed in the groove will help you to observe the amount of wear. "Dishing" should not exceed 1/32" for individual V-belts, or 1/64" for banded V-belts. A shiny groove bottom is a sign that the belt or sheave, or both are badly worn and the belt is bottoming in the groove. Worn sheaves or shiny sheave groove bottoms will show up first on the smaller sheave.

The cost of replacing a worn sheave will be more than recovered in longer V-belt life, reduced maintenance and downtime.

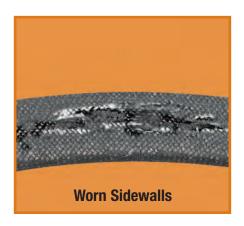



Proper Position of Belt in Sheave


Bottoming and Dishing of Belt in Sheave



Troubleshooting Installation Problems



- △-5 **Sheaves mounted too far from the bearing** cause excessive overhung load on the bearing and overheating. This can also cause shafting to whip, bend or break. Sheaves should be mounted as close as possible to the bearing. If this affects alignment severely, it may be necessary to re-locate the equipment to stay within alignment limits of 1/16" per 12" of shaft center-to-center distance.
- ⚠ -6 **Bearing condition** and normal wear may well be the cause of overheating, rather than belt tension. They should be inspected for proper lubrication and wear according to the specifications of the bearing or equipment manufacturer. Shaft condition should also be checked and replaced if necessary. Bent shafts can be detrimental to bearings, belts and sheaves, as well as being a safety hazard due to the imbalance created. Sheave "wobble" may be caused by bent shafts.
- ⚠ -7 **Insufficient belt tension** vies closely with worn sheave grooves as the leading cause of V-belt slippage and other problems. This is often evidenced by "spin burn". The easiest and most practical way for maintenance personnel to judge proper belt tension is by the "SST" method—Sight, Sound and Touch.

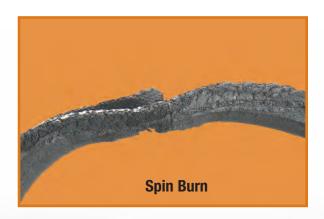



Section 2 A Troubleshooting Installation Problems

Sight—While the drive is operating, look for a slight "bow" or "sag" in the slack side of the belts. This is normal, and should appear more noticeable under heavy load, such as at startup or during load cycles. Check the sheave grooves for wear.

 


Sound—Properly designed V-belt drives should not squeal or howl under peak load conditions, such as on startup of a centrifugal fan. If necessary, stop the drive, then start it again. If a squeal is heard, the belts should be tightened just to the point where they do not squeal under peak load.



Newly installed belts require about 24 hours to become fully seated in the grooves. Recheck tension the next day.

Touch–V-belts don't always squeal when they are slipping. If slippage is suspected, a sure way of determining it is by stopping the drive (lock it out!) and placing your bare finger against the inside of a sheave groove. If slippage is present, it will generate enough heat so that you can't keep you finger on the groove. If this is true, and there is no outside heat source, then the drive is probably slipping.





tensioning.

Troubleshooting Installation Problems



⚠ -8 **Excessive tension** on V-belts can be even more detrimental than too little tension, affecting not only the belts, but also bearings and shafts. Again, the best rule is to apply only enough tension on the belts to keep them from slipping during startup or peak loading. Some indicators of excessive tensioning (but not always) are:

- Repeated belt breakage
- Excessive vibration
- Belt underside is cracked
- Overheated bearings
- Whipping or bent shafts

▲ -9 Improper sheave and bushing installation can result in sheave

"wobble" as well as causing bushings or sheave hubs to crack. When installing split-tapered bushings such as QD® or Taper-Lock® types, always follow manufacturer's instructions.

It is important to never lubricate the tapered surfaces before installing. The lubrication will permit recommended torque wrench values to increase the actual force on the bushing and hub. This usually results in cracking of the bushings at the bolt hole or keyway.



On flanged bushing types, the flange should never be brought up flush with the sheave hub face. A small gap between the two surfaces is normal. When removing split-tapered bushings, start at the jack-screw hole opposite the split, to avoid cracking the bushing.


Recommended Wrench Torque Values To Use In Tightening QD Bushings

Bushing Size	Cap Screw Size & Thread	Foot Pounds Torque Wrench Normal Applications*
QT	1/4-1	9
JA	No. 10-24	5
SH-SDS-SD	1/4-20	9
SK	5/16-18	15
SF	3/8-16	30
E	1/2-13	60
F	9/16-12	110
J	5/8-11	135
M	3/4-10	225
N	7/8-9	300
Р	1-8	450
W	1-1/8-7	600
S	1-1/4-7	750

^{*} For severe (rock-crusher type applications) these values can be increased by a maximum of 50%. On severe applications the bolt torque should be rechecked at periodic intervals during operation.

Selecting the Right Belt - The array of V-belt types, cross-sections and lengths on the market today are all part of technological efforts to provide more efficient, cost-saving answers to your drive requirements.

This category is intended to point out how you can be sure of applying the best Carlisle V-belt type to your applications.

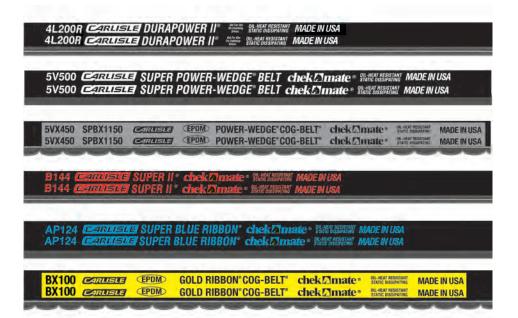


Troubleshooting Selection Problems



⚠-1 Worn V-belts may have gotten that way simply because they have delivered the service life built into them. Carlisle, like other manufacturers, strives to build V-belts with a "balanced" construction, so each element of the belt will last as long as all other elements. But the wide variety of industrial applications, environmental conditions and maintenance practices makes this impossible to achieve. However, the expected life of an industrial V-belt on a properly designed drive is 3 years, or 25,000 hours.

<u>^</u> -2 **Using the wrong type of belt or cross-section can create problems for you**...and it's not hard to do, since many have similar dimensions. For example, the following Carlisle V-belts have approximately the same top width (5/8") and length (85" 0.C.).

And yet, the horsepower ratings of these belts range from as little as 2.2 HP per belt to as much as 11.9 HP per belt on a 5" diameter sheave and 1750 RPM motor!

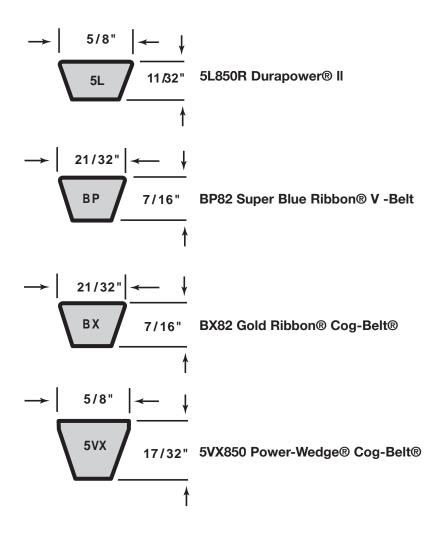



A V-belt survey of your drives by a Carlisle Certified Drive Specialist can assure you of using the correct V-belt. This service may be obtained by contacting your Carlisle Authorized Stocking Distributor. He maintains a full and convenient inventory of replacement belts and sheaves, and stands ready to assist you in selecting the proper size and type for each application.



Carlisle's Industrial Power Transmission catalog lists all types and sizes of stock industrial belts and sheaves. The following suggestions will help in selecting the proper belt.

DO match the correct belt cross-section to the sheave groove. (A-A, B-B, 5V-5V, etc.)

DON'T use "B" section belts in "5V" grooves, or vice-versa. Check the sheave number stamped on the rim if in doubt.

DON'T replace "A" or "B" heavy duty V-belts with "4L" or "5L" light duty (FHP) V-belts. FHP belts are built for Fractional Horsepower applications, and usually run singly. Most multiple drives require heavy duty belts.

DO use V-belts marked "Oil and Heat Resistant" where oil or heat is present. The Carlisle Gold Ribbon® Cog-Belt® and Power-Wedge® Cog-Belt® offer maximum heat and oil resistance—see key numbers & 2 and & 3

DO insist on a belt labeled "Static-dissipating" on drives operating in hazardous atmospheres.

DO use banded V-belts where vibration or shock loads can cause belts to turn over or jump out of the sheave grooves.

DO use matched sets from the same manufacturer (see key number <u>\$\alpha\$\$-3</u>)

DON'T mix old and new belts on a drive. They cannot be matched.

-3 Mismatched belts or mixed brands from different manufacturers cannot be matched <u>b</u> together, and will not deliver the service life they should.

Although all manufacturers use similar belt numbering systems, different brands with the same number will differ slightly in dimensions and are not capable of being mixed in a set. Also, construction differences cause them to ride differently in the grooves, and to stretch differently.

It should be noted that the majority of complaints regarding belt matching are found to be due to other causes, such as misalignment, improper tension and sheave wear. These factors should always be checked if belts seem to be mismatched.

Carlisle belts branded with the Chek-Mate® logo do not require the use of matching codes. Chek-Mate is a process that manufactures belts to meet or exceed Association for Rubber Products Manufacturers (ARPM) tolerances for a matched set. Matching numbers are not required on Carlisle's Super Blue Ribbon, Super II, Super Power-Wedge, Power-Wedge and Gold Ribbon Cog-Belts which all carry the distinctive Chek-Mate logo.




Troubleshooting Selection Problems



On multiple-belt drives, this whipping can be reduced or eliminated by using banded V-belts. A banded V-belt consists of individual V-belts joined together with a bonded, reinforced tie-band (see illustration).

These belts will ride slightly higher in the sheave grooves to provide clearance between the band and the sheave flange. Because of this, sheave grooves should not be worn or "dished-out" more than 1/64". Also, because they are banded together, alignment of the sheaves is somewhat more critical.

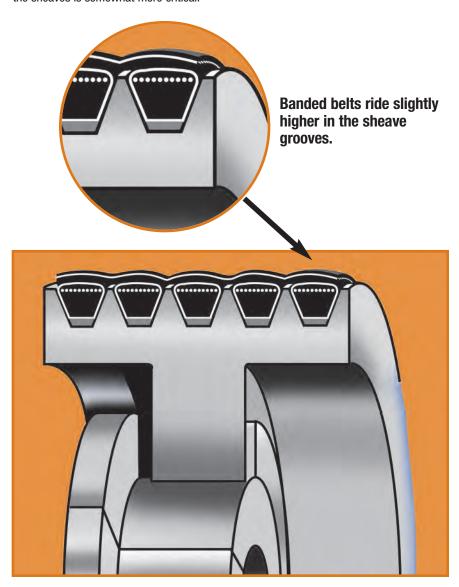

The chart on the next page will be helpful in selecting the best Carlisle belt for an application.

V-Belt Selection Guide

Carlisle Brand	Generic Belt Type (Cross-Sections)	Normal HP Range	Maximum Belt Speed (FT/Min) ⁽¹⁾
Super Blue Ribbon	Classical Multiple (A, B, C, D)	1-500	6500
Super II	Classical Multiple (A, B, C,)	1-500	6500
Gold Ribbon Cog-Belt*	Classical Cogged Multiple (AX, BX, CX, DX)	1-500	6500
Super Power-Wedge	Narrow Multiple (3V, 5V, 8V)	1-1000	6500
Power-Wedge Cog-Belt*	Narrow Cogged Multiple (3VX, 5VX, 8VX)	1-600	6500
Super Vee-Band	Classical Banded (RBP, RCP, RDP)	1-500	6500
Gold Ribbon Cog-Band	Classical Cogged Banded (RBX, RCX, RDX)	1-500	6500
Wedge-Band	Narrow Banded (R3V, R5V, R8V)	1-1000	6500
Double Angle	Double-V Belts (AA, BB, CC, DD)	1-200	6500
Vee-Rib	V-Ribbed (J)	4-500	6000
Thoro-Twist	Link (3L, A, B, C)	1-300	5000 (1000 min.)
Durapower II	FHP (2L, 3L, 4L, 5L)	Light Duty	6500

Notes: (1) Normally limited by sheave materials. (2) Expect little or no life loss due to heat.

Available in **chek mate** construction

^{*} Some Carlisle belts are now made of EPDM. Ethylene Propylene Diene Monomer is a synthetic rubber with outstanding properties. EPDM is durable, static conductive and resistant to oil, heat, hardening and glazing. The operating temperature range of EPDM is minus 50 to +250F.

Troubleshooting Selection Problems



Nor Temp. (°F Min.		Oil/Heat Resistance	Static Dissipating	General Application
-35	120	Good	~	General-Purpose Heavy Duty Industrial Drives
-35	120	Good	~	General-Purpose Heavy Duty Industrial Drives
-50	250	Excellent	~	Longer Life, High Efficiency, Small Diameters
-35	130	Very Good	~	High-Performance, Compact Industrial Drives, Long C.D.
-50	250	Excellent	V	High-Performance, Compact Industrial Drives, Short C.D.
-35	120	Good	~	Reduces Belt Whip, Turnover on Pulsating, Surge Loads
-35	130	Excellent	~	Longer Life, High Efficiency, Reduces Belt Whip, Turnover on Pulsating, Surge Loads
-35	130	Very Good	~	Reduces Belt Whip, Turnover on Pulsating, Surge Loads
-35	120	Good	Special Order	Serpentine Drives
-35	130	Very Good	No	Small Diameters, High Speed Ratios, Compact
-35	130	Excellent	No	Emergency Replacement Fixed Center Distance
-35	120	Fair	~	Using a Single Belt

"Environmental Protection" can be as important for a V-belt as for humans. This section deals with how to minimize adverse environmental conditions.



Troubleshooting Environmental Problems



△-1 **Improper or prolonged storage** can reduce service life considerably. V-belts should be stored in a cool, dry place with no direct sunlight. On shelves in boxes or piles, the stack should be small enough to avoid excess weight and distortion on the bottom belts. On pegs, the longer belts should be coiled in loops of suitable size to prevent distortion from the weight of the belt.

The following guide provided by the Association for Rubber Products Manufacturers (ARPM) should be followed for optimum conditions:

Guide to Maximum Number of Coilings for V-Belts in Storage

Belt Cross Section	Belt Length (Inches)	Number of Coilings*	Number of Loops*
	Under 60.0	None	1
A,AA,3V	60.0 to 120.0	1	3
and B	120.0 to 180.0	2	5
	180.0 and up	3	7
	Under 75.0	None	1
BB,C,	75.0 to 144.0	1	3
and 5V	144.0 to 240.0	2	5
	240.0 and up	3	7
	Under 120.0	None	1
	120.0 to 240.0	1	3
D	240.0 to 330.0	2	5
	330.0 to 420.0	3	7
	420.0 and up	4	9
	Under 180.0	None	1
	180.0 to 270.0	1	3
E and 8V	270.0 to 390.0	2	5
	390.0 to 480.0	3	7
	480.0 and up	4	9

^{*}One coiling results in three loops; two coilings result in five loops, etc.

The pegs should be crescent shaped in cross-section to avoid compression set dents in the belts from sharp corners and the pegs should be sufficiently large in cross-section to avoid compression setting into sharp bends resulting from the weight of the hanging belts.

It is recognized that belts are sometimes coiled in smaller loops for packaging for shipment than indicated in the above table, but such packaging should not be for prolonged storage.

△ -2 Excessive heat

Standard construction V-belts (such as Carlisle's Super Blue Ribbon) are compounded for moderate resistance, and should give adequate service under normal conditions.

Belt temperature (not ambient or surrounding air temperature) is the determining factor when heat is a suspected cause of short belt life.

Tests have shown that the service life of a V-belt is cut in half for every 35°F raise in belt temperature.

Troubleshooting Belt Temperature


It's best to use a temperature gauge but you can also get an indication of heat by touching the belt.

If you can grasp the belt firmly for 5 seconds, the belt temperature is probably not over 140°F and not beyond the operating range for most V-belts. However, if you can't hold it for 5 seconds, the belt temperature is probably over 140°F, and heat could be contributing to shorter belt life.

Further evidence of heat may be the appearance of small cracks on the underside of the belt.

What to do about excessive heat:

- **1.** Check for slippage (see key number <u>A</u>-7).
- 2. Ventilate the drive or shield from heat source.
- **3.** Replace belts with specially compounded heat-resistant belts (such as Carlisle's Gold Ribbon or Power-Wedge Cog-Belt).

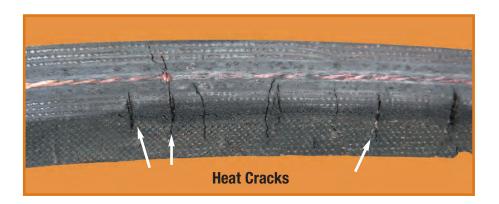

Standard construction V-belts (such as Carlisle's Super Blue Ribbon) are compounded for moderate grease and oil resistance. However, an excessive amount can cause softening, swelling and deterioration of the rubber compounds, as well as slippage.

What to do about oil or grease:

- 1. When there is occasional exposure from spillage or leakage, the belts and sheave grooves should be cleaned with a mixture of detergent and water–after the drive has been locked out and cause of leakage corrected.
- **2.** When belts cannot be protected from oil, specially compounded oil-resistant V-belts should be used.

Troubleshooting Environmental Problems



▲ -4 **Never** apply so-called "belt dressings" to V-belts. These compounds are usually made from a petroleum derivative and can have a destructive effect on rubber compounds and other components of the belt. If belts slip, check for adequate tension and/or worn sheave grooves. (see ▲ -4, ▲ -7).



♠ -5 Abrasive conditions from sand, dust or grit can accelerate wear of both belts and sheaves. This is especially true when slippage is present. Belt selection can be an important factor. Experience has shown that raw-edge constructions reduce this wear because they reduce the "sandpaper-effect" caused by slippage. Drives should be well-shielded against excessive abrasive particles as much as possible.



♠ -6 Foreign objects, such as wood chips, can create havoc with V-belt drives. Belt breakage and turnover are the most common symptoms. Shielding the drive is a necessity. Belt guards with expanded metal screening are often used, but ventilation is sometimes sacrificed, possibly requiring additional cooling. Banded belts are some times effective, since they eliminate belt turnover.

^ 7 Excessive moisture can penetrate the fabric covering of a V-belt, causing deterioration. In addition, a large amount of water can reduce friction and cause slippage. Belt drives should be protected as much as possible when used outside or when subject to spray from washdown hoses, etc. Belt tension should be inspected regularly.





Section 2 D Troubleshooting Design Problems

When normal corrective measures as discussed in the previous sections do not produce the desired results, an inherent design problem may be the culprit. Solutions are best left up to the plant engineering department or a Certified Drive Specialist. However, the discussion presented in this section will help identify symptoms caused by design problems.

Carlisle offers Drive Engineer, a new generation of analysis software that helps users increase their drive efficiency, drive life and overall knowledge of belt drives. Drive Engineer is a user friendly Windows®-based program that facilitates new drive selection and existing drive analysis. The package includes information about horsepower capacity, warnings for drive limits, service factors, hub loads, bushings, diameters, center distance and tensioning—in short, everything needed to design a maximum-efficiency drive system. Drive Engineer can be downloaded at carlislebelts.com



Troubleshooting Design Problems



This is commonly evidenced by excessive stretching which requires frequent take-ups to prevent slippage. Another warning sign can be repeated belt breakage.

In many cases, underbelting can be corrected simply by using raw edge, cogged V-belts which have a higher horsepower rating. When these are used, drives should be identified to assure that future replacements are made with this type of belt.

⚠ -2 **Drive overbelting**, can result in longer v-belt life but may be just as serious as underbelting. Overbelted drives often have low belt tension, on a per belt basis, due to past shaft and/or bearing issues. The low tension can cause the set to appear mismatched and individual belts will have to pull more then their fair share of load which will cause belt stretch and premature failure.

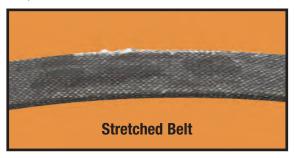


Table A. Minimum Recommended Sheave and Idler Diameters

V-Belt Cross Section	Minimum P.D. Sheave or Inside Idler	Minimum O.D. Flat Backside Idler*
A, AP	3.0	4.5
B, BP	5.0	7.5
C, CP	9.0	13.5
D, DP	13.0	19.5
E, EP	21.0	31.5
AX	2.6	4.0
ВХ	4.0	6.0
CX	7.0	10.5
DX	11.0	16.5
3V	2.6	_
3VX	2.2	_
5V	7.0	_
5VX	4.3	_
8V	12.4	_
8VX	11.2	_

^{*}Note: Backside Idlers are detrimental to V-belt service life.

Another problem caused by sheaves that are too small is overheating of motor bearings, or even bent shafts. NEMA publishes minimum recommended sheave diameters for use with electric motors to avoid excessive bearing loads. Table B shows these minimums for the most common motor types.

General purpose motors having continuous time rating with the frame sizes, horsepower and speed ratings listed in the following are designed to operate with V-belt sheaves within the limiting dimensions listed. Selection of V-belt sheave dimensions is made by the V-belt drive vendor and the motor purchaser but, to assure satisfactory motor operation, the selected pitch diameter shall be no smaller than the dimensions listed on the next page.

Troubleshooting Design Problems



Table B. Application of V-Belt Sheave Dimensions to General Purpose Motors

	Inte	gral-Horsepo Polyphase I		rs-	Conventional A,B,C,D & E	elt Sheave Narrow 3V,5V, & 8V
		Horsepo	ower at		Minimum Pitch	Minimum Outside
Frame		Synchronous			Diameter,	Diameter,
Number	3600	1800	1200	900	Inches	Inches
143T	12	1	w	2	2.2	2.2
145T	2-3	12-2	1	w	2.4	2.4
182T	3	3	12	1	2.4	2.4
182T	5				2.6	2.4
184T			2	12	2.4	2.4
184T	5				2.6	2.4
184T	72	5			3.0	3.0
213T	72-10	72	3	2	3.0	3.0
215T	10		5	3	3.0	3.0
215T	15	10			3.8	3.8
254T	15		72	5	3.8	3.8
254T	20	15			4.4	4.4
256T	20-25		10	72	4.4	4.4
256T		20			4.6	4.4
284T			15	10	4.6	4.4
284T		25			5.0	4.4
286T		30	20	15	5.4	5.2
324T		40	25	20	6.0	6.0
326T		50	30	25	6.8	6.8
364T			40	30	6.8	6.8
364T		60			7.4	7.4
365T			50	40	8.2	8.2
365T		75			9.0	8.6
404T			60		9.0	8.0
404T		•••		50	9.0	8.4
404T		100			10.0	8.6
405T			75	60	10.0	10.0
405T		100			10.0	8.6
405T		125			11.5	10.5
444T			100		11.0	10.0
444T				75	10.5	9.5
444T		125			11.0	9.5
444T		150				10.5
445T			125		12.5	12.0
445T				100	12.5	12.0
445T		150				10.5
445T		200				13.2
				1		

NEMA Standard, MG1-14.42

⚠ -5 Backside idlers can create their own problems, because they cause V-belts to bend opposite to the way they were designed. Care must be taken to see that a backside idler is large enough in diameter to reduce harmful stresses, which often cause cracks on the underside of the belt. Table A (under ♠-3) also shows these minimum recommended diameters.

Full technical information regarding proper V-belt design can be found in the Engineering Guide for Industrial V-Belt Drives and in our drive design software, Drive Engineer.

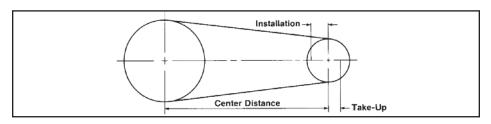


TABLE 3
POWER-WEDGE/SUPER POWER-WEDGE V-BELTS
CENTER DISTANCE ALLOWANCE FOR INSTALLATION AND TAKE-UP (INCHES)

Standard Length	For Installation (Subtract) For Take-Up (Add)									
Designation Sections	3VX	3V	5VX	5V	8VX	8V	All			
	3V	Banded	5V	Banded	8V	Banded	Cross			
250 thru 475	0.5	1.2					1.0			
500 thru 710	0.8	1.4	1.0				1.2			
750 thru 1060	0.8	1.4	1.0		1.5	3.4	1.5			
1120 thru 1250	0.8	1.4	1.0	2.1	1.5	3.4	1.8			
1320 thru 1700	0.8	1.4	1.0	2.	1.5	3.4	2.2			
1800 thru 2000	—	—	1.0	2.1	1.8	3.6	2.5			
2120 thru 2360	_	_	1.2	2.4	1.8	3.6	3.0			
2500 thru 2650	_	_	1.2	2.4	1.8	3.6	3.2			
2800 thru 3000	_	_	1.2	2.4	1.8	3.6	3.5			
3150 thru 3550 3750 4000 thru 5000	_ _ _	_ _ _	1.2 — —	2.4 	2.0 2.0 2.0	4.0 4.0 4.0	4.0 4.5 5.5			

TABLE 4 CLASSICAL V-BELTS CENTER DISTANCE ALLOWANCE FOR INSTALLATION AND TAKE-UP (INCHES)

Standard	For Installation (Subtract) For Take-Up (Add)										
Length Designation	A, AX AP	B, BX BP	BX & BP Banded	C, CX CP	CX & CP Banded	DX DP	DX & DP Banded	All Cross Sections			
21 thru 35	0.75	1.00	1.50	_	_	_	_	1.00			
36 thru 55	0.75	1.00	1.50	1.50	2.00	_	_	1.50			
56 thru 85	0.75	1.25	1.60	1.50	2.00	_	_	2.00			
86 thru 112	1.00	1.25	1.60	1.50	2.00	_	_	2.50			
116 thru 144	1.00	1.25	180	1.50	12.10	2.00	2.90	3.00			
148 thru 180	_	1.25	1.80	2.00	2.20	2.00	3.00	3.50			
191 thru 210	_	1.50	1.90	2.00	2.30	2.00	3.20	4.00			
225 thru 240	_	1.50	2.00	2.00	2.50	2.50	3.20	4.50			
225 thru 300	_	1.50	2.20	2.00	2.50	2.50	3.50	5.00			
315 thru 390	_	_		2.00	2.70	2.50	3.60	6.00			
420 and over	_	_	_	2.50	2.90	3.00	4.10	1.5% of Belt			
								Length			

Tension-Finder。

User Instructions

The Carlisle Tension-Finder can be used to tension individual belts or V-Bands.

The Tension-Finder should be used only with Carlisle belt lines listed in Table 1. The Tension-Finder should NOT be used with aramid cord or glass cord belts. Use with these belts could result in damage to equipment.

⚠ Warning!! Remove The Tension-Finder from the belt before starting the drive.

Procedure

Step 1: Install belts loosely on the drive.


Step 2: Apply enough tension to take the slack out of the belts.



Step 3: Scribe a line on the belt using the Tension-Finder as a square.



Step 5: With the line in the Start Slot attach the spring to the belt. Note: For cog belts the best place for the spring may be in a cog.

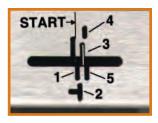

Step 7: Determine the required slot for your drive from Table 1. Tighten the belt until the line has moved to the designated slot. (In this picture the line is in Slot 3.)



Step 4: Place the Start Slot over the line.



Step 6: Scribe a line at the spring end of the Tension-Finder. Use this line as a reference point in case the spring slips off the belt.

Step 8: Remove the Tension-Finder from the belt, tighten mounting bolts, and replace belt guards. You're ready to start the drive!

Table 1: Recommended Tensioning Slots

Belt Type	New Belt Slot No. Used Belt		
AP, BP, CP, DP, RBP, RCP, RDP A, B, C AX, BX. CX, DX, RBX, RCX, RDX	2	1	
5V,8V R3V, R5V,R8V 5VX, 8VX R3VX, R5VX,	3	2	
R5VL SPAX, SPBX, SPCX			



Frequency-Finder

Another method of tensioning uses the principle of forced vibration. It's extremely accurate and works on all types of belts. The frequency of vibration is directly related



to the tension of the belt, i.e. the higher the frequency reading, the higher the belt tension. When the free span of a belt is plucked it will vibrate at a frequency known as its "natural" frequency. The frequency is a function of the static belt tension, the belt mass, and the length of the free belt span.

A reliable and practical method of determining the recommended frequency range for a drive is found in Carlisle's drive design software. Drive Engineer calculates the required minimum and maximum static belt tension levels and the corresponding frequency levels for a specific set of drive parameters.


Spring Loaded Tensiometer

Uses a tensioning method based on the fact that the force required to deflect a given span length by a given amount is related to the tension in the belt.

Procedure for using the Carlisle V-Belt Tensiometer

- 1. Measure the span length of the drive. (See Fig. 2). Set the large "0" ring at 1/64" for each inch of belt span. For example, set the large "0" ring 1/4" for a span length of 16", at 1/2" for a span length of 32", at 1" for a span length of 64" etc.
- **2.** Set the small "0" ring at zero (See Fig. 1) and press down the Carlisle Tensiometer at the center of the belt span.
- a. On a single belt drive, depress the Tensiometer until the large "0" ring is even with the bottom of a straight edge placed on the outside rims of the two sheaves.
- b. On a multiple belt drive, depress the Tensiometer until the large "0" ring is even with the top of the next belt. Measure each belt in the drive. and take the average reading of all belt tensions.
- Remove the Tensiometer, and observe that the small "0" ring has moved from its original setting at zero to the number of pounds required to deflect the belt.
- **4.** Check this reading against the value of the deflection force in the V-Belt Tensioning table (page 39).



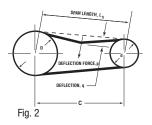

Guidelines presented in this manual are suggestions to help install and maintain belts properly. Please always follow the recommendations of the original equipment manufacturer.



V-BELT TENSIONING

AVERAGE TENSIONING VALUES (RECOMMENDED MINIMUM FORCE PER BELT)

V-Belt	V-Belt	Smal	l Sheave	Defle	ction Force for	Drive Speed	Ratio (lbs.)
Type	Section	Speed Range	Diameter	1.00	1.5	2.0	4.0 & over
		1800-3600	3.0	2.0	2.3	2.4	3.3
	Α	1800-3600	4.0	2.6	2.8	3.0	3.3
Super II	AP	1800-3600	5.0	3.0	3.3	3.4	3.7
oupor		1800-3600	7.0	3.5	3.7	3.8	4.3
		1200-1800	4.6	3.7	4.3	4.5	5.0
	В	1200-1800	5.0	4.1	4.6	4.8	5.6
	BP			4.8	5.3		6.3
		1200-1800	6.0			5.5	
		1200-1800	8.0	5.7	6.2	6.4	7.2
_	С	900-1800	7.0	6.5	7.0	8.0	9.0
Super	CP	900-1800	9.0	8.0	9.0	10.0	11.0
Blue Ribbon	UF	900-1800	12.0	10.0	11.0	12.0	13.0
		700-1500	16.0	12.0	13.0	13.0	14.0
		900-1500	12.0	13.0	15.0	16.0	17.0
	D2	900-1500	15.0	16.0	18.0	19.0	21.0
	DP	700-1200	18.0	19.0	21.0	22.0	24.0
		700-1200	22.0	22.0	23.0	24.0	26.0
		1800-3600	3.0	2.5	2.8	3.0	3.3
		1800-3600	4.0	3.3	3.6	3.8	4.2
	AX	1800-3600	5.0	3.7	4.1	4.3	4.6
		1800-3600	7.0	4.3	4.6	4.8	5.3
		1200-1800	4.6	5.2	5.8	6.0	6.9
		1200-1800	5.0	5.4	6.0	6.3	7.1
	BX						
0.1.1.03.1.		1200-1800	6.0	6.0	6.4	6.7	7.7
Gold Ribbon		1200-1800	8.0	6.6	7.1	7.5	8.2
Cog-Belt		900-1800	7.0	10.0	11.0	12.0	13.0
	CX	900-1800	9.0	11.0	12.0	13.0	14.0
		900-1800	12.0	12.0	13.0	13.0	14.0
		700-1500	16.0	13.0	14.0	14.0	15.0
		900-1500	12.0	16.0	18.0	19.0	20.0
	DV	900-1500	15.0	19.0	21.0	22.0	24.0
	DX	700-1200	18.0	22.0	24.0	25.0	27.0
		700-1200	22.0	25.0	27.0	28.0	30.0
		1200-3600	2.2	2.2	2.5	2.7	3.0
		1200-3600	2.5	2.6	2.9	3.1	3.6
		1200-3600	3.0	3.1	3.5	3.7	4.2
	3VX	1200-3600	4.1	3.9	4.3	4.5	5.1
		1200-3600	5.3	4.6	4.9	5.1	5.7
		1200-3600	6.9	5.0	5.4	5.6	6.2
			4.4		7.5		
Dower		1200-3600	5.2	6.5		8.0	9.0
Power-	5VX	1200-3600		8.0	9.0	9.5	10.0
Wedge Cog-Belt		1200-3600	6.3	9.5	10.0	11.0	12.0
		1200-3600	7.1	10.0	11.0	12.0	13.0
		900-1800	9.0	12.0	13.0	14.0	15.0
		900-1800	14.0	14.0	15.0	16.0	17.0
		900-1800	12.5	18.0	21.0	23.0	25.0
		900-1800	14.0	21.0	23.0	24.0	28.0
	8VX	700-1500	17.0	24.0	26.0	28.0	30.0
		700-1200	21.2	28.0	30.0	32.0	34.0
		400-1000	24.8	31.0	32.0	34.0	36.0
		900-1800	7.1	8.5	9.5	10.0	11.0
		900-1800	9.0	10.0	11.0	12.0	13.0
Super Power- Wedge	5V	900-1800	14.0	12.0	13.0	14.0	15.0
		700-1200	21.2	14.0	15.0	16.0	17.0
	9)/	900-1800	12.5	18.0	21.0	23.0	25.0
		900-1800		21.0		24.0	
			14.0		23.0		28.0
	8V	700-1500	17.0	24.0	26.0	28.0	30.0
		700-1200	21.2	28.0	30.0	32.0	34.0
	1	400-1000	24.8	31.0	32.0	34.0	36.0

NOTE: These are minimum deflection force values. New belts should be installed at two times these values. Used belts should be between 1.0 and 1.5 times these values.

Topical Index

Topic Pages
ABRASION
BANDED BELTS24,25,26,31 BEARINGS, Overheated18,19,21,33,34
BUSHINGS, Installation of
CHEK-MATE 24,26,27 COGGED V-BELTS 2,23,24,226,30,33,34 COILING of BELTS 29 COMPRESSION SECTION of V-BELTS 2
CORD, Tensile2,15 DESIGN, Drive Problems12,32,33,34,35
DISHING, Sheave Groove (see SHEAVE Wear) DRESSING, Belt31
DRIVE ENGINEER
ELEMENTS OF BELT CONSTRUCTION
• Abrasion31
• Foreign objects in drive31 • Heat24,27,30
• Moisture31
• Oil & grease27,30
• Storage
GROOVE, Inspection of
HEAT, Effect and Measurement of
 Ambient
• Belt27,30
• Sheave20
IDLERS, Backside35
IMPULSE LOADS25 INSPECTION
• Bearing19
• Belt12,20
• Shaft
• Sheave5,6,8,16,18,19 INSTALLATION
• Belt4,7,9,15,36,37,38
• Bushing21
 Sheave
• Take-Up data36
INSUFFICIENT WRAP
MATCHING, Belt7,24
MISALIGNMENT, Sheave6,8,16,17,19
MISMATCHING, Apparent
MISPLACED SLACK
MOISTURE, Excessive31
MOUNTING, Sheave6,8,16,19,21
NEMA, Sheave Standards35
OIL and GREASE
OVERBELTED DRIVE

Горіс	Pages
OVERLOADED DRIVE	33
OVER-TENSIONING	
PITCH DIAMETER	04.05
PRYING BELTS ON DRIVE	34,35 7 15
RAW EDGE BELTS (see COGGED V-BELTS)	
REPLACEMENT CHECKLIST	
RE-TENSIONING	
SAFETY	
SEATING, V-belt SELECTION. V-belt	
SHEAVE	23
Alignment	6816
Bushing	
Cleaning	5
• Damage6,	18,21,32
Diameters	34,35
• Inspection5,6,	
• Installation	
• Wear	
Wrap SHIELDS, Drive	
SHOCK LOADS	
SIDEWALLS	
• Belt	2,31
Sheave	6,18,31
SIGHT METHOD, Tensioning	20
SLIPPAGE, Causes12,18,19,20,	30,31,35
SOUND METHOD, Tensioning	
SPLIT-TAPER BUSHINGS	
SQUEAL	
STATIC DISSIPATIONSTORAGE	24,27
STRETCH	
TAKE-UP (see TENSION)	1,00
TEMPERATURE	
Ambient	24 27 30
• Belt	
Sheave	
ΓΕΜΡLATE, Sheave	
TENSILE CORDS	
FENSIONING8,19,20,21,31,33,35,	
rension-finder15,	
ΓORQUE WRENCH, Use of	
ΓΟUCH METHOD, to Determine:	
Belt Temperature	30
Slippage	
Tension	
FROUBLESHOOTING GUIDE	
ΓURNOVER, Belt	15,25,31
JNDERBELTED DRIVE	33
/IBRATION, V-belt3,12,18,	21.25.33
/-Belt Tensioning tools	
=	
NOBBLE, Sheave	6,21
NRAP, Insufficient	35

Safety must be considered a basic factor in machinery operation at all times. Most accidents are the result of carelessness or negligence. Power transmission products such as those listed in this catalog are potentially dangerous and must be guarded by the contractor, installer, purchaser, owner, and user as required by applicable laws, regulations, standards, and good safety practice.

Failure to follow proper procedures for installation, care, maintenance and storage of products may result in failure to perform properly and may result in damage to property and serious bodily injury. Make sure that the product selected for any application is recommended for that service.

It is the responsibility of the contractor, installer, purchaser, owner, and user to install, maintain, and operate the parts or components manufactured and supplied by The Carlstar Group in such a manner as to comply with all occupational safety laws, federal, state and local laws, ordinances, regulations, etc.

CAUTION

Guards, access doors, and covers must be securely fastened before operating any equipment. If parts are to be inspected, cleaned, observed, or general maintenance performed, the motor driving the part or components is to be locked out electrically in such a manner that it cannot be started by anyone. Failure to follow these instructions may result in property damage, personal injury, or death.

AIRCRAFT WARNING!

Carlisle belts and pulleys are not designed or intended for aircraft use. Do not use Carlisle belts on aircraft propeller, rotor or accessory drives. Do not use Carlisle belts on helicopters or private, commercial, or ultralight aircraft.

