



# **Rivet Nut Gun User Manual**

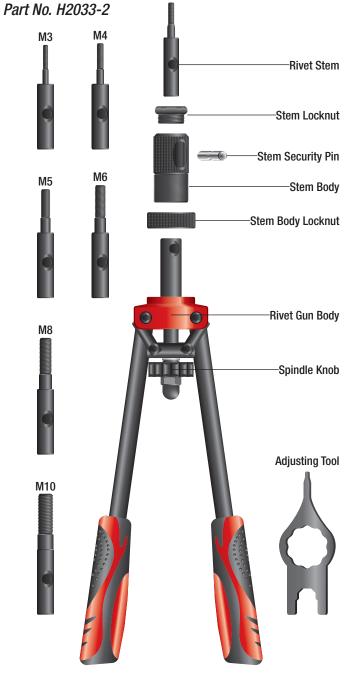


## Adjustment for Operation

#### 1. Install The Correct Stem Size For Application

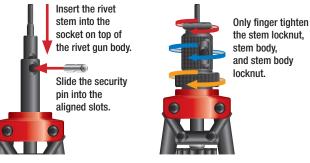

### 2. Stroke Adjustment

Rotating the stem body to adjust the stroke length. Adjust accordingly to suit the application.

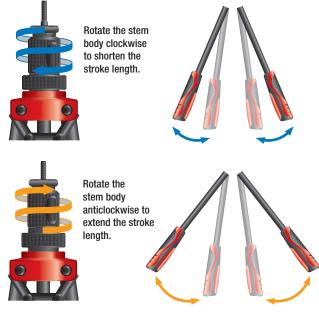

#### 3. Tighten The Stem Body Locknut

Once the stroke length has been decided, tighten up the stem locknut and stem body locknut for a stable and firm operation.

## Instruction of Operation

#### 1. Choose The Correct Size Of The Rivet Nut





Making sure the rivet nut is only finger tightened to the base of the stem.

#### WARNING: DO NOT USE STAINLESS STEEL RIVET NUTS ON THIS TOOL.

#### 2. Installation Of The Rivet Nut





Insert the stem and nut rivet into the hole

APPLY EXCESSIVE FORCE.



Final result



Twist the spindle knob to retrieve stem.

www.championparts.com.au sales@championparts.com.au



